

# VIBRANCE™ TRIAL KIT

## HOW-TO GUIDE

**DIRECT**  
**COLORS**

### PRE-APPLICATION

- Clean the surface to remove dirt, dust, residues, paint, glue, adhesives, and oils.
- Conduct an absorption test to determine if the concrete is ready for staining. Pour water onto the surface and wait 3-5 minutes.
- If the water is not absorbed, clean and etch the surface using CitrusEtch™ concrete etcher to open the pores of the concrete surface. Refer to the CitrusEtch™ technical data sheet for detailed instructions.



### PREPARATION

- Ensure your Vibrance™ Dye Trial Kit includes 3 dye colors, 1 sealer, 1 Preval sprayer, and 1 foam brush.
- Purchase at least 1 quart of acetone solvent.



CAUTION: Avoid contact with eyes and skin. Do not breathe dust. Do not take internally. In case of eye contact, flush thoroughly with water. In case of skin contact, flush thoroughly with water. If swallowed, do not induce vomiting. Call physician immediately. KEEP OUT OF REACH OF CHILDREN.

- Select the desired Vibrance™ Dye color for testing.
- Carefully open the Vibrance™ Dye container.
- Pour the entire contents of Vibrance™ Dye trial size into the Preval sprayer container.



CAUTION: Acetone is extremely flammable, harmful if swallowed, or inhaled. Keep away from heat, sparks, and flame. Store and use with adequate ventilation, allowing airflow to disperse vapors. Before using acetone, open windows and doors and extinguish all open flames such as gas appliance pilot lights, candles, etc. Do not smoke, use a lighter or matches, or anything that could cause a potential spark.



- Measure 5 ounces of acetone solvent.
- Add acetone to the container with Vibrance™ Dye.
- Seal the container with the provided lid.
- Shake the mixture for 20 seconds.
- Allow the mixture to sit for one hour before use.

## ASSEMBLE THE PREVAL SPRAYER

Remove the filter from the Preval power unit straw and attach the acetone dye-filled container to the power unit by turning counterclockwise.



## APPLICATION

- Spray the Vibrance™ Dye stain in a continuous motion with the Preval sprayer.
- Avoid runs by releasing the button while still moving at the end of the stroke.
- Overlap strokes and keep the sprayer upright.
- Apply 2 or more thin coats for the best results.



Let the dye dry completely, which will take about 8 hours. The color may appear faint after drying, but don't worry – it will become more vibrant once the sealer is applied. Be patient and allow the stain to dry for the recommended time to achieve the best results. Keep in mind that the sealer is a crucial component of the process and should not be skipped.


## CLEAN UP

### TO REUSE PREVAL SPRAYER INSTRUCTIONS

To reuse the Preval sprayer for other dye colors, rinse the container with acetone and spray clear acetone for 5 or 10 seconds to clean the internal buildup.

## SEALING

- Shake bottle.
- Dip the foam applicator brush into the sealer bottle.
- Apply a thin coat in a west-to-east direction.
- Allow the sealer to dry completely.

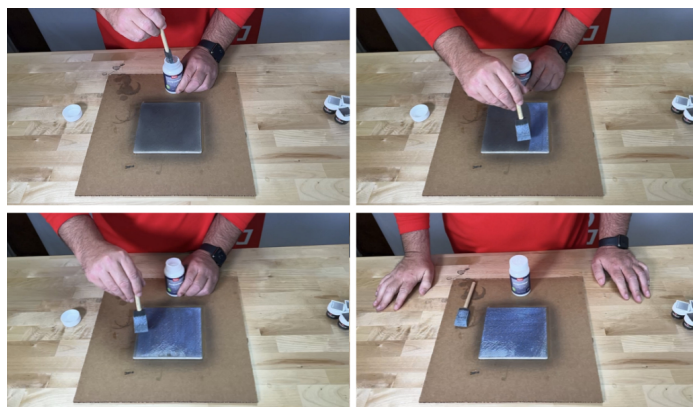

- Apply a second coat of sealer in a north-to-south direction.



- Let the sealer dry completely.



- You are done!

## SAFETY DATA SHEET

Scan the QR code below for the complete Safety Data Sheet for Vibrance™ Dye.

