

Vibrance™ CONCRETE DYE



VIBRANCE™ TRIAL KIT APPLICATION GUIDE

Concrete must be cured for 30 days before applying Vibrance™



STEP 1: PREPARE THE SURFACE

- Perform a water absorption test on the concrete.
- Etch the surface if needed using CitrusEtch™ concrete etcher.
- Clean the surface to remove dirt, dust, residues, paint, glue, adhesives, and oils.
- Allow the surface to dry completely.

STEP 2: GATHER MATERIALS AND COMPONENTS

- Ensure your Vibrance™ Trial Kit includes 3 dye colors, 1 sealer, 1 Preval sprayer, and 1 foam brush.
- Purchase at least 1 quart of acetone solvent such as Klean Strip or Sunnyside.



STEP 3: MIX THE VIBRANCE DYE

- Select the desired color for testing.
- Carefully open the Vibrance dye container.
- Pour the entire 5-ounce packet of Vibrance™ Dye into the Preval container.

STEP 4: COMBINE DYE AND ACETONE

- Measure 5 ounces of acetone solvent.
- Add acetone to the container with Vibrance™ Dye.
- Seal the container with the provided lid.
- Shake the mixture for 20 seconds.
- Allow the mixture to sit for one hour before use.



STEP 5: ASSEMBLE THE PREVAL SPRAYER

- Remove the filter from the Preval power unit straw.
- Attach the acetone dye-filled container to the power unit by turning counterclockwise.



STEP 6: APPLY VIBRANCE™ ACETONE DYE


- Spray the dye in a continuous motion with the Preval sprayer.
- Avoid runs by releasing the button while still moving at the end of the stroke.
- Overlap strokes and keep the sprayer upright.
- Apply 2 or more thin coats for the best results.

Let the dye dry completely, which will take about 8 hours. The color may appear faint after drying, but don't worry – it will become more vibrant once the sealer is applied. Be patient and allow the stain to dry for the recommended time to achieve the best results. Keep in mind that the sealer is a crucial component of the process and should not be skipped.



STEP 7: SEAL THE SURFACE

- Dip the foam applicator brush into the sealer bottle.
- Apply a thin coat in a west-to-east direction.
- Allow the sealer to dry before applying additional coats.

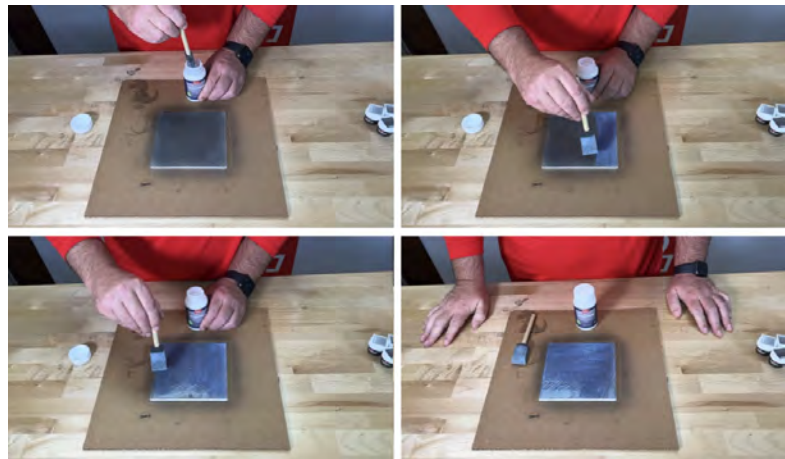

STEP 8: APPLY THE SECOND COAT OF SEALER

- Apply a second coat of sealer in a north-to-south direction.
- Let the sealer dry completely.



TO REUSE PREVAL SPRAYER INSTRUCTIONS

To reuse the Preval sprayer for other dye colors, rinse the container with acetone and spray clear acetone for 5 or 10 seconds to clean the internal buildup.

Disclaimer: Direct Colors does not warranty or guarantee results (outcomes). Concrete variations or improper application may cause unintended results. Test product on an inconspicuous or small area and allow to fully cure to ensure compatibility and desired result.